

# **DANGER**      **READ THIS FIRST**      **WARNING** **LP-GAS IS EXTREMELY FLAMMABLE AND EXPLOSIVE**

**AVOID SERIOUS INJURY AND PROPERTY DAMAGE. IF YOU SEE, SMELL OR HEAR ESCAPING GAS...EVACUATE AREA IMMEDIATELY! CALL YOUR LOCAL FIRE DEPARTMENT! DO NOT ATTEMPT TO REPAIR. DO NOT STORE IN BUILDING OR ENCLOSED AREA. DO NOT USE ON HOT AIR BALLOONS OR AIRCRAFT.**

Make sure you are thoroughly trained before you attempt any regulator installation or maintenance. Improper conditions or procedures can cause accidents resulting in property damage and personal injury.

Become thoroughly familiar with NPGA Safety Pamphlet 306, "LP-Gas Regulator and Valve Inspections & Maintenance" and RegO® Safety Warning "LP-Gas Regulators" found in the regulator section of the L-500 & L-102 Catalogs. Follow its recommendations.

Know and understand NFPA Pamphlet 58 "Liquefied Petroleum Gas Code", which is the law in many states. This publication is available from NFPA, Batterymarch Park, Quincy, MA 02269. Following its requirements is essential in the safe use of LP-Gas. Section 4.4 states: "Persons who transfer liquid LP-Gas, who are employed to transport LP-Gas, or whose primary duties fall within the scope of this code shall be trained in proper handling procedures. Refresher training shall be provided at least every three years and shall be documented."

Pamphlet 58 also states that "All regulators for outdoor installations, except regulators used for portable industrial applications, shall be designed, installed or protected so their operation will not be affected by the elements (freezing rain, sleet, snow, ice, mud or debris). This protection may be integral with the regulator."

Vents must be clear and fully open at all times. An obstructed vent will prevent the regulator from functioning properly and may result in property damage and personal injury.

Regulators should be installed with the vent facing down or otherwise covered for protection.

Twin-Stage Regulators should be installed completely under cover and/or with screened vent pipe away adapters that position both vents in a down position without obstructing flow through the vents.

Make sure piping is clean and free from foreign material (such as dirt, corrosion, chips, pipe joint compound, etc.) Always replace the pigtail when replacing a regulator. Thread sealant used on piping must be compatible with LP-Gas.

Make sure the use and location of the regulator(s) as a component(s) of the LP-Gas system to be installed is proper. (Avoid misusing LP-Gas equipment.) See the following RegO® publications: L-500 & L-102 Catalogs and the LP-Gas Serviceman's manual.

For underground installations, make sure that water, mud, dirt, and insects cannot get into the regulator, and that the regulator is easily accessible for regulator maintenance. Follow NPGA Bulletin 401. See RegO® Safety Warning "LP-Gas Regulators" found in the regulator section of the L-500 & L-102 Catalogs.

Check regulator and installation for leaks following NFPA #54 and NPGA Bulletin 403 "Pressure Testing and Leak Checking LP-Gas Piping Systems".

In selecting a label for posting at the installation site, consider RegO® part number 2403-400 along with your own, NPGA's and others.

Remember to instruct the owner/user/customer in safety matters concerning LP-Gas and this equipment. See RegO® Safety Warning "LP-Gas Regulators" found in the regulator section of the L-500 & L-102 Catalogs.

---

RegO® requests that this information be forwarded to your customers. Additional copies are available from RegO® and your authorized RegO® Distributor.

**REGO**

Printed in USA 08A-0910-0390  
Part number LV4403-500

Elon, N.C. 27244 U.S.A. Phone (336) 449-7707 Fax (336) 449-6594 [www.regoproducts.com](http://www.regoproducts.com)